


# Assembly Instruction

IMS CONNECTOR SYSTEMS GmbH  
 Obere Hauptstrasse 30  
 D-79843 Löffingen  
 Postfach 1141  
 D-79840 Löffingen


Tel (+49) 7654 901-0  
 Fax (+49) 7654 901-199  
 Net: www.imscs.com  
 E-mail: sales@imscs.com

<b>Number:</b> M-187	<b>Date:</b> 15.07.05
<b>Description:</b> Cable mount plug / jack	<b>Signature:</b> R.Schwär
	<b>Page:</b> 1 of 1

Using parts:

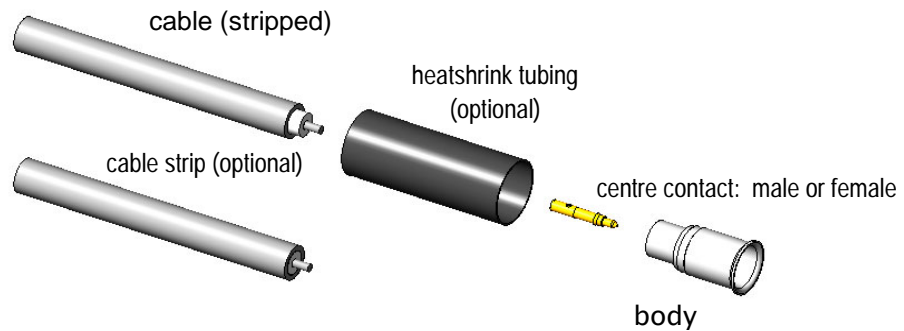

- 1.) Slide onto the cable heatshrink tubing (opt.)
- 2.) Slide the centre contact on, until it bottoms against the cable dielectric and solder the centre contact.

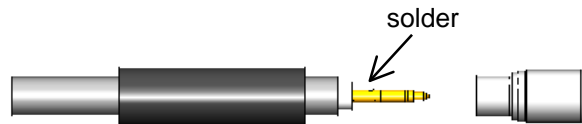

- 3.) Push the cable with soldered centre contact until finale stop.



- 4.) Solder the connector in place.



- 5.) Slide the optional heatshrink tubing over the soldered connector and heatshrink it in place.

