


Assembly Instruction

IMS CONNECTOR SYSTEMS GmbH
 Obere Hauptstrasse 30
 D-79843 Löffingen
 Postfach 1141
 D-79840 Löffingen


Tel (+49) 7654 901-0
 Fax (+49) 7654 901-199
 Net: www.imscs.com
 E-mail: sales@imscs.com

Number: M-187	Date: 15.07.05
Description: Cable mount plug / jack	Signature: R.Schwär
	Page: 1 of 1

Using parts:

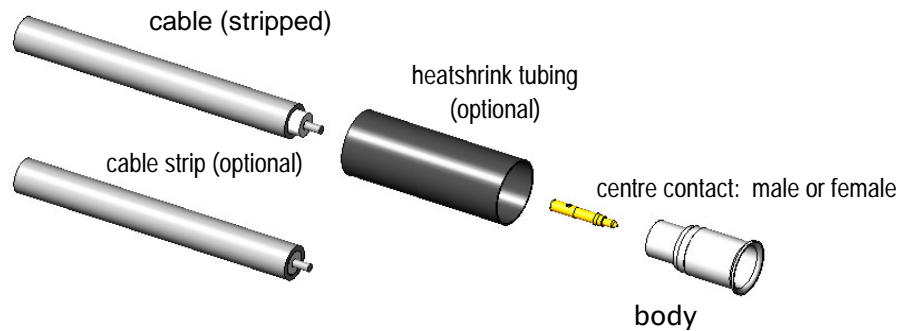

- 1.) Slide onto the cable heatshrink tubing (opt.)
- 2.) Slide the centre contact on, until it bottoms against the cable dielectric and solder the centre contact.

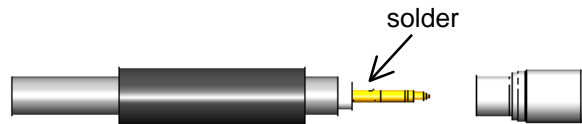

- 3.) Push the cable with soldered centre contact until finale stop.



- 4.) Solder the connector in place.



- 5.) Slide the optional heatshrink tubing over the soldered connector and heatshrink it in place.

