


# Assembly Instruction

IMS CONNECTOR SYSTEMS GmbH  
 Obere Hauptstrasse 30  
 D-79843 Löffingen  
 Postfach 1141  
 D-79840 Löffingen

Tel (+49) 7654 901-0  
 Fax (+49) 7654 901-199  
 Net: www.imscs.com  
 E-mail: sales@imscs.com


<b>Number:</b> M-187	<b>Date:</b> 15.07.05
<b>Description:</b> Cable mount plug / jack	<b>Signature:</b> R.Schwär
	<b>Page:</b> 1 of 1

Using parts:

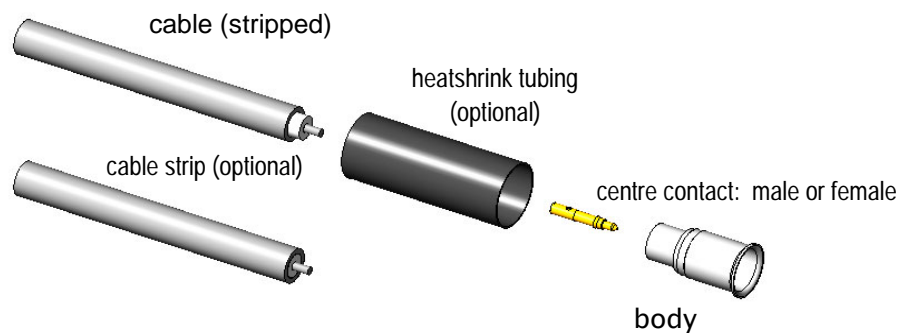

1.) Slide onto the cable heatshrink tubing (opt.)

2.) Slide the centre contact on, until it bottoms against the cable dielectric and solder the centre contact.

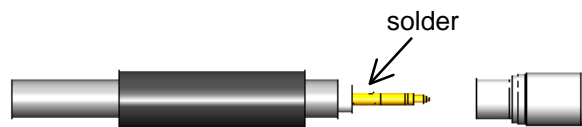

3.) Push the cable with soldered centre contact until finale stop.



4.) Solder the connector in place.



5.) Slide the optional heatshrink tubing over the soldered connector and heatshrink it in place.

